REMINGTON®

EST. NEW YORK 1937

REMINGTON ONE™
Digital Dry & Style Hair Dryer

EC6077U51

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

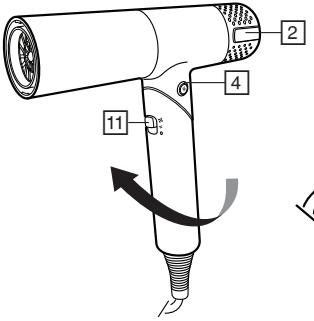
2
4
11

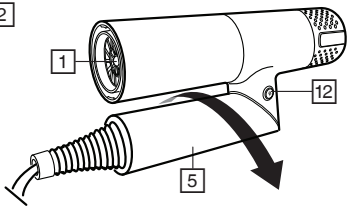
1
12
5


10


6

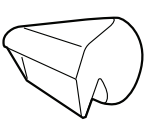
7

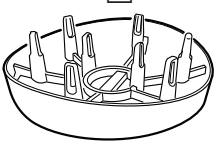
8

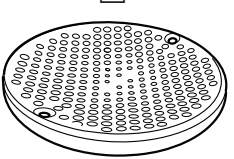
9

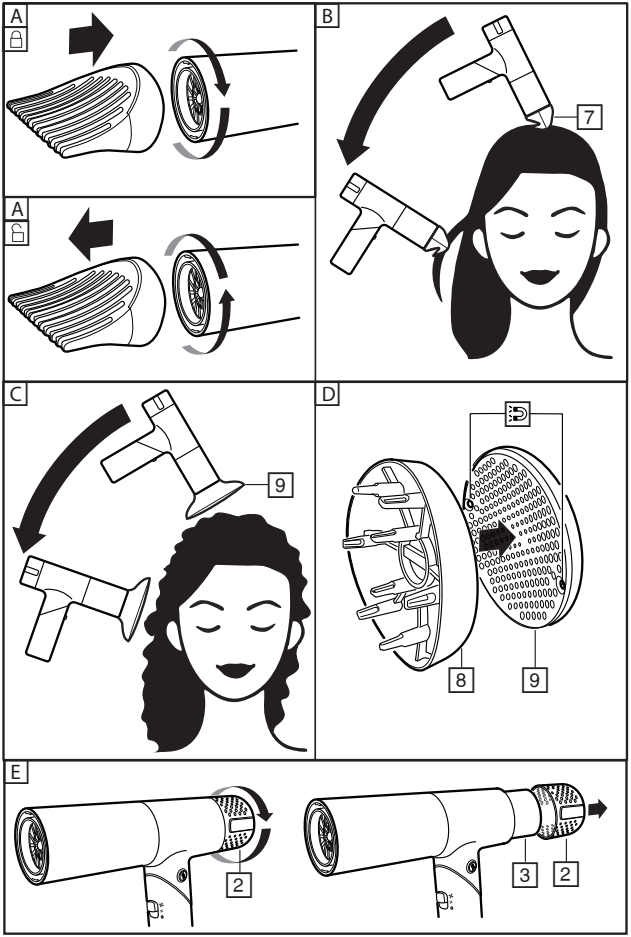
A
A
B
7
C
9
D
8
9
E
2
3
2

Before First Use

	Read the instructions and retain for future reference.

Intended Use

	Household use only

Specification

Power Rating (W)	1350-1600
Rated Voltage (V)	220-240V, 50/60Hz

Warning Symbol Glossary

	Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
	CAUTION: Attachments can become hot during use, let them cool before removing.

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not operate the appliance in the folded position.
- Do not use accessories or attachments other than those we supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- Do not use the appliance if it is damaged or malfunctions.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap around the appliance.
- Never drop or insert any object into any of the appliance's openings.
- When the appliance is connected to the power supply, never leave it

unattended
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Parts List

1	Outlet grille
2	Removeable air filter
3	Inner mesh
4	Heat setting indicator ring
5	Folding handle
6	Concentrator attachment
7	Flyaway tamer attachment
8	Curl defining diffuser prongs
9	Gentle drying diffuser attachment
10	Root boost comb attachment
Controls	
11	Speed selector switch
12	Heat selector button
Accessories (not shown)	
13	Storage bag

Fitting & removing attachments

Fit attachments by pushing onto the front of the hair dryer until they click in place (Fig. A). Once fitted attachments can be rotated as required.
TIP: Selecting the cold temperature setting for a few seconds before removing accessories can help to reduce their temperature.

Use - Speed Setting

Plug the appliance into the mains power supply.

To switch on, select your desired speed setting using the speed selector switch.

Parts List	Setting	Symbol
11	Off	**O**
	Slow	
	Fast	

Use - Heat Setting

Select required heat setting using the heat selector button.

Parts List	Setting	Indicator Ring Colour
12	Cold	Blue
	HaloGuard™	Green
	Low	Amber
	Medium	Pink
	High	Red

HaloGuard™ Heat Setting

A gentle setting to prevent overheating while still providing efficient and comfortable drying. Can be used in conjunction with any speed setting.

True Cold Shot

Reduces the heat to a constant cool temperature to set your style.
Can be used in conjunction with any speed setting.

Auto Memory

Each time you use your dryer it will automatically set itself to the last heat setting used.

Styling Tips

How to create smooth styles with the concentrator attachment.
For best results, dry your hair as normal until it is about 70% dry. Then turn off your dryer and section your hair into manageable areas.

- Select a high heat and fast speed setting.
- Starting on the lower sections of hair, work on one section at a time. Use a round brush (not included) to grip the underneath of your hair and run the concentrator attachment down the section until it's 100% dry.
- Activate the cold setting and run the concentrator down the section again to set your style in place.

How to add root volume using the root boost comb attachment.
For best results, use on hair that is 70-80% dry.

- Place the comb teeth close to your scalp to direct airflow towards the roots.
- Gently push the teeth into the roots so the hair lifts against the comb. Hold for up to 10 seconds to boost volume.
- Repeat around the head, finishing at the crown and hairline for maximum lift.

How to finish straight styles with the flyaway tamer attachment.
For best results use on dry straight / pre-straightened hair.

- Select a low heat and fast speed setting.
- Focus on the top layer of the hair.
- Start near the roots and position the attachment close so your hair. Your hair will be attracted to the attachment.
- Slowly glide the attachment down the length of your hair (Fig B)
- Repeat around your crown and parting until the desired level of smoothness is achieved.

How to gently dry curls with the gentle drying diffuser attachment.

- Select a medium heat and slow speed setting.
- Start drying by hovering the Gentle drying diffuser attachment over your roots and then slowly move over your lengths until 100% dry (Fig. C).
- The gentle diffused airflow speeds up air drying without making contact and disturbing your curls' natural shape.

How to dry and define curls with the curl defining diffuser attachment.

- The finishing diffuser prongs are fitted to the bowl and held in place with magnets (Fig. D).
- Select a medium heat and slow speed setting.
- Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.

Thermal Cut-Out protection

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air.

Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to **Storage, Cleaning & Maintenance** to clean the grille/filter.

If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

Storage, Cleaning & Maintenance

Allow the appliance cool down before cleaning and storing away

- Wipe all the surfaces with a damp cloth.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt build-up from the dryer internals and air filter.

Remove, clean and replace:

2	Removeable air filter

- Clean inner mesh by twisting in the direction shown (Fig. E) and pulling it away from the handle revealing the inner mesh.

Clean

3	Inner mesh

- Remove air filter with a cloth or soft brush and then replace the removable air filter.
- IMPORTANT: Do not attempt to remove the inner mesh. This is non removable.

Folding handle

For easy and convenient storage, twist the handle to make the dryer more compact in size.

Internal Cleaning Cycle

- After 800 minutes of use, when you switch on your dryer, the heat setting indicator ring will flash 10 times. Press and hold the heat selector button for 3 seconds and then turn on speed selector switch.
- During the internal cleaning cycle, the motor will operate in the reverse direction for 10 seconds and blow air out of the air filter to clean the internal parts of the dryer.
- If the internal cleaning cycle is not completed, the cleaning reminder will activate again the next time you switch on your dryer.

Recycling

To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website
eu.remington-europe.com/erp

Service & Guarantee

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.
To claim an extra 1 year guarantee, register your product online within 28 days of purchase.
Register at: **https://uk.remington-europe.com/product-registration**
Consumables are guaranteed only for their recommended lifecycle. Replacement/ spare parts* are excluded and are only covered by a 1 year warranty.
*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

Service Centre

UK
0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland
142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
https://ie.remington-europe.com

Ref. No. EC6077U51

Type No. D36A

26/UK/ EC6077U51
T22-7004071-A
Version 02 /26
Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk

© 2026 Spectrum Brands, Inc.